Instruction Manual

DENVER® CVC-1800

CE

Note!

If you experience any other problem, never attempt to repair an electrical item yourself. Always contact Customer Service or ask a professional in order to ensure your personal safety. An electric shock can be life-threatening.

We withhold the rights to make changes to our products, packaging and user instruction manual at any time within the framework of on-going developments.

ENGLISH

Instructions on environment protection

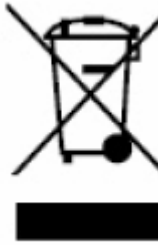

Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.

Copyright Denver Electronics

CE

www.denver-electronics.com

Fault finding

When using a highly technical device do not assume that every irregularity is defect. Always consult the table first, in order to assess whether you are able to solve the problem yourself. If this does not prove possible, please contact our Customer Service by telephone.

Problem	Possible causes	Solution / Tip
Suction power is weak	The secondary air valve is open.	Close the secondary air valve.
	The vacuum hose is blocked.	Check all of the adapter parts, valves, vacuum hose tube etc and remove the blockage.
	The filters are not fitted correctly or they are soiled.	Check the filters and replace them with new filters where necessary.
The device does not switch on	The plug is not correctly connected to the wall socket.	Check whether the wall socket fuse is intact. It could be that the wall socket itself is defective.

Safety Instructions

- Keep the packing film away from children.(Danger of suffocation)
- Keep the appliance away from children.
- Only use the appliance for the purpose intended!
- NEVER leave the device unattended when in operation.
- This appliance operates using dangerous voltage levels. Never switch it on if the power supply cable is damaged, or if any other damage is visible on the appliance. Never open the housing but instead contact to carry out repairs. Use our hotline for further information.
- Do not use the device to remove any burning or smoking objects, such as cigarettes, matches or hot ashes, any sharp objects such as broken glass, or water or any other fluids. Any of the above could damage the appliance and may cause injury to the operator. Glowing ashes, burning cigarettes etc. may set the filter alight, fluids may cause a short circuit and sharp objects will damage the filter.
- Never expose the appliance to the elements (rain etc.)
- Always unplug the appliance from the main power supply before cleaning or servicing (e.g. changing the filter)
- When unplug the power cable from the wall socket, please do not pull on the cable. Instead apply gentle force to the plug housing.
- Children are often unable to understand the dangers of using electrical equipment or may underestimate

them. Therefore do not allow children to work with electrical equipment.

- Never sit or stand on the appliance.
- This vacuum cleaner is only suitable for use with 230V/50Hz systems.
- Only use the appliance once it has been fully assembled. The filter must be undamaged!
- If a carpet has been recently shampooed, ensure that it is completely dry before vacuuming.
- Never place the appliance next to a radiator or an oven.
- If you should pass this appliance on to another user, please provide them with these operating instructions.
- In case of damage or repairs, please contact our Customer Service.
- Please keep hair, loose items of clothing, fingers and all other extremities away from any openings and moving parts.
- The guarantee does not cover damage caused as a result of incorrect handling, nonconformity with the user instructions and damage caused by / repairs carried out by third parties. This also applies to wear & tear on the parts, e.g. the filter.
- Do not push objects into the orifices. The appliance should never be used if any orifice is blocked. Remove all dust, fluff, hair and other objects blocking the air intake or exhaust air vent.
- Do not use the appliance to remove any burning or

Exhaust filter

- Remove the plug from the wall socket. (Never pull on the cable, always apply light pressure to the plug housing)
- Remove the exhaust air filter cover by pressing the interlock release button.
- Take out the exhaust air filter and rinse it well under cold, clean water before leaving to dry. Never clean the exhaust air filter using soap or any other cleaning fluid. This would destroy the filter!
- After cleaning, make sure the exhaust air filter is correctly mounted.
- If the exhaust air filter is heavily soiled, it is to be recommended that the filter is replaced with a new one.
- Replace the exhaust air filter cover.

Cleaning the DENVER CVC-1800

As and when necessary, the DENVER CVC-1800 cyclone vacuum cleaner may be wiped clean using a damp cloth and a little mild cleaning fluid. Never use abrasive cleaning fluids as these could damage the appliance surface. Ensure that no fluid is allowed to get inside the DENVER CVC-1800 cyclone vacuum cleaner. Never place parts in the dishwasher.

Only connect your DENVER CVC-1800 cyclone vacuum cleaner to the main power supply once all parts are completely dry. From time to time it may also be necessary to remove hair and fluff from the wheels in order to ensure that the DENVER CVC-1800 cyclone vacuum cleaner remains comfortable to use. Never oil or lubricate roller bearing in the DENVER CVC-1800 cyclone vacuum cleaner.

- Carefully turn the filter in an anti-clockwise direction, until it disengages. Now remove the Filter.
- Clean the Filter thoroughly. Never clean the Filter using soap or any other cleaning fluid. This would destroy the filter!
- If the filter is heavily soiled, and this is leading to a reduction in suction power, it is recommended that the filter be replaced with a new one.

Once cleaning is completed, replace the filter by simply reversing the process outlined above.

- Place the filter back in the dust receiver tank and turn it carefully in a clockwise direction, until it locks in place.

Now place the reassembled dust receiver tank back in the DENVER CVC-1800 cyclone vacuum cleaner, ensuring that it clicks into place. Your DENVER CVC-1800 cyclone cleaner is now ready for use.

smoking objects, such as cigarettes matches or hot ashes, or any flammable liquids.

- Keep the pipe or tube and any other orifice away from the face and body.
- Do not use the appliance without the correct dust receiver tank in place.
- Always unplug the appliance before fitting or removing any accessory parts.
- Read through the assembly instructions carefully before assembling the appliance. The assembly sequence must be followed precisely.
- In the interest of your own safety please check the appliance carefully for damage before use. In case any faults do not use the appliance until it has been repaired by and expert.
- Only use the original accessories.
- Always remove the plug from the main power supply before fitting or removing any accessory parts.
- In order to avoid an electrical shock never immerse the power supply cable, plug or any other parts of the appliance in water or any other fluid.
- ONLY use the appliance for the purpose intended.
- Only use the appliance once it has been completely assembled and is ready for use!
- NEVER immerse appliance parts in water.
- NEVER use the appliance close to water.
- NEVER clean the appliance using a sourcing pad or abrasive cloth.
- DO NOT use cleaning brushes or abrasive agents.
- Do not crush or bend the cable nor place it on hot

surfaces.

- Never cover the air vents as this may lead to overheating. Danger of fire!

Your DENVER CVC-1800 cyclone vacuum cleaner and its technical data:

Attachments

1. Floor Brush
2. Telescopic tube
3. Vacuum Hose
4. "T" Brush nozzle
5. Crevice nozzle
6. Dust receiver tank incl. filter

Equipments

- 3 wheels
- Washable long-life filter
- Automatic cable rewind
- Maximum motor capacity 1800W

You can now remove both the tank and the cleaning system from their anchored position using the carry handle located on the dust receiver tank. Now simply carry the dust receiver tank to the dustbin.

Hold the dust receiver tank over your dustbin and push the interlock device back. This action will open the bottom of the dust receiver tank, which will release its contents into the bin.

Note if the dust receiver tank is very full, it is recommended that a bag is pulled over the tank so that the tank can be emptied into the bag first. This avoids excessive dust being released.

Once the tank is emptied it is recommended that the filter is cleaned if necessary.

The filter

The DENVER CVC-1800 cyclone vacuum cleaner functions without a dust bag. The cyclone technology directs the dusty intake air into the dust receiver tank using air turbulence. The washable long-life filter (filter) in the dust receiver tank and an exhaust air filter combine to ensure that the air is clean before it is expelled.

Attention: The device must only be used with the filter and exhaust air filter in place.

Emptying the dust receiver tank

The dust receiver tank is transparent, which means that you are always able to see how full it is. You should always empty the dust receiver tank by the time its contents reach the MAX mark.

Always unplug the appliance before emptying the dust receiver tank!

- Exhaust air subject to multi-filter process
- Electrical regulation of the suction capacity

Technical data

Main connection: 230V/50Hz
Capacity: 1800W
CE
We reserve the rights to make changes to the scope of deliverables, equipment and the technical data!

Parts

Take care when unpacking the device and ensure that you keep all packing materials for the duration of the guarantee period.

Filter cleaning system

The cleaner DENVER CVC-1800 cyclone vacuum cleaner is fitted with a unique filter cleaning system. This allows you to remove the dust from the receiver tank in a completely new, clean and comfortable manner.

Explanation of accessories

You will receive two different nozzles with your DENVER CVC-1800 cyclone vacuum cleaner. These allow the device to be utilized for a variety of applications.

Floor brush

The floor brush is the fitting most commonly used. It is perfect for us on large, even areas. The 360 joint allows the brush to gain access to every corner, with ease and without complications. The toggle switch provides you with the option of using the floor brush with a range of floor coverings:

- For carpets: Push the toggle switch to select the symbol for carpet. By pressing the toggle switch you will have lowered the brushes.
- For polished floor coverings, press the toggle symbol for smooth flooring. The brushes that have now been lowered are perfect for cleaning tiles, parquet flooring and PVC.

Secondary air valve

The secondary air valve, which is located on the device handle, allows you to control the suction power of the DENVER CVC-1800 cyclone vacuum cleaner more finely. It is recommended that the secondary air valve be opened when cleaning curtains etc. in order to avoid them being drawn in to the device.

To open: push forwards
To close: push backwards

After vacuuming

Once you have finished vacuuming turn the device off:

- Use either the foot or the hand to press the ON/OFF switch on the DENVER CVC-1800 cyclone vacuum cleaner.
- Remove the plug from the wall socket. (Never pull on the cable, always apply light pressure to the plug housing)
- Take the plug in your hand in order to avoid the cable flicking up during the winding process. Press down on the cable rewind button with the foot until the cable has rewound completely onto the cable drum, which is inside of DENVER CVC-1800 cyclone vacuum cleaner.
- In order to place the device in its parking position, use the hook located above the floor nozzle to guide it into the DENVER CVC-1800 cyclone vacuum cleaner nozzle holder.

may be heard when the device is switched on. This will cease after a short period and does not indicate the presence of fault.

Stop

Never use the device to vacuum clay, cement, drill or plaster. These materials will block the filter.

Varying the suction capacity

You can use the suction capacity regulator to select individual suction requirements. Slide the regulator forth in order to increase the suction capacity, back to decrease it.

- MIN: This level is ideal when vacuuming sensitive materials such as curtains.
- MIN-MAX: The middle level is suitable for upholstered furniture, carpets and mattresses.
- MAX: This level should only be used for robust flooring such as wood and tiles.

"T" Brush nozzle

The brush nozzle is the best fitting for cleaning sensitive surface such as picture frames or books.

Crevice nozzle

The crevice nozzle is well suited to the vacuuming those areas that you are unable to gain access to tight spaces, material folds (e.g. crease in armchairs), corners and niches using the crevice nozzle.

Assembling your DENVER CVC-1800 Cyclone vacuum cleaner

Attention: Before attaching or detaching any

accessories always ensure that you unplug the power supply from the wall socket!

1. Attaching or detaching the hose:

To attach: Push the vacuum hose into the air intake opening until it snaps into place.

To detach: Push the button on the vacuum hose to release the hose.

2. Attaching the telescopic tube and its accessories:

- Mount the telescopic rube onto the handle

- Set the telescopic tube to the desired length. In order to do this simply push the slide on the telescopic tube forwards before pulling on the lower part of the tube until it has reached the length required. Once you have selected the optimum length, let the slide return to its original position and ensure that it snaps shut.

- Now attach the floor brush to the telescopic tube as shown in the diagram. Attach the crevice nozzle and brush nozzle using the same method.

Operations

Vacuuming

- Before use ensure that you have released a sufficient length of cable, then plug the device into the wall socket. The ideal cable length is identified on the cable by a yellow marking. When unrolled, the cable should not exceed the maximum length. This is identified by the red marking.
- Turn on the DENVER CVC-1800 model cyclone vacuum cleaner by gently tipping the foot to press down on the ON/OFF switch.

Note:

On rare occasions it is possible that a “whistling” sound